



Product Specifications/Installation Sheet

Item # MS-00075 or
MS-00076 or
MS-00077

Item: Single Free-Standing Ballet Bar

Warning:

Read ALL instructions thoroughly before using any and all equipment manufactured or distributed by Gibson Inc. Because of the nature of the sport, the possibility of injury is inherent in gymnastic and athletic activity. The equipment is intended for use only by properly trained and qualified participants under supervised conditions. When you use Gibson products, know your limitations and the limitations of your equipment. Keep your equipment in good condition by inspecting for loose fittings or damage and test for stability before each use.

Product Description:

The Gibson Single Free-Standing Ballet Bars are available in length variations of 5' and 8'. Available in hardwood options of Oak, Poplar and Maple. You will find that it stores easily and takes up very little space. The base finish is a deluxe hard powder coating which not only looks great, but is very durable.

Kit Includes:

1. (2) Gray bases
2. (2) Zinc-Plated Staffs
3. (2) Rails: 5' or 8' long of Poplar, Oak or Maple
4. Parts pack
 - a. (4) 3/4" #10 Phillips Tapping Screws
 - b. (2) Tightening Knobs



Tools Required for the Gibson Free-Standing Ballet Bar:

1. Drill with 1/8" Drill Bit
2. Electric Phillips Screwdriver

Product Installation for the Gibson Free-Standing Ballet Bar:

1. Insert zinc-plated staff into the gray uprights. If you are assembling this bar without help, use a wall to help.



Product Specifications/Installation Sheet

**Item # MS-00075 or
MS-00076 or
MS-00077**

Item: Single Free-Standing Ballet Bar

2. Turn the staffs so the saddles are parallel to one another. Lay the rail in the saddles and make sure it is centered. If you have a 5' rail, install a minimum of 6" from each end. If you have an 8' rail, we recommend 5' between uprights. Mark the holes on the rail with a pencil.
3. Pre-Drill holes in the rail for the tapping screws with a 1/8" drill bit. Drill 1/2" deep.
4. Install rail to uprights using a screwdriver and provided tapping screws.



****IMPORTANT****

Product Limitations:

**This unit is designed to aid in balance during dance and stretch exercises.
*DO NOT HANG OR SWING ON THIS EQUIPMENT!!!***

Guarantee:

Gibson equipment is guaranteed for a period of one year from the date of invoice against faulty manufacturing or defects in material. The seller's sole obligation under this warranty shall be to repair or, at its discretion, replace at its expense any defective part or parts. Material claimed defective must be returned prepaid by customer to us for examination, if requested. Damage caused by extreme usage or misuse will not be covered.